

INSTALLATION GUIDE

LoRa Device

Note: This guide is intended for use with LoRa's with a digital display only.





MAIN DISPLAY IN LORA RADIO MODE



SET TO LORA RADIO MODE

All LoRa's must be set to Radio mode to work with GivEnergy inverters.
Use the buttons on the front of both LoRa's, one at a time.

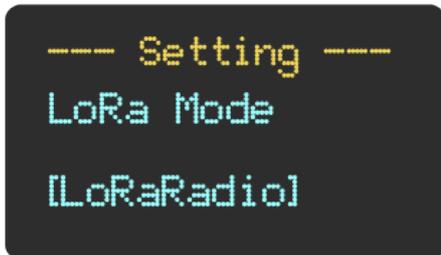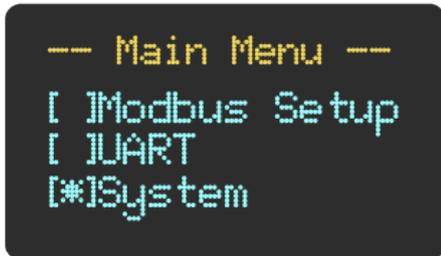

1. Press and hold **FUNC** to display the Main Menu



2. Press **FUNC** repeatedly to scroll to System



3. Press **ENTER** to select System Setting menu



4. Press **ENTER** repeatedly until display reads LoRa Radio



5. Press **FUNC** to return to Main Menu



6. Press **FUNC** to scroll to Reboot



7. Press **ENTER** to reboot device to update settings

CHANGE RADIO FREQUENCY

All LoRa's must be set to Radio mode to work with GivEnergy inverters.
Use the buttons on the front of both LoRa's, one at a time.



1. Press and hold **FUNC** to display the Main Menu



2. Press **FUNC** repeatedly to scroll to Frequency



3. Press **ENTER** to select Frequency Setting menu



4. Press **FUNC** to select digit to change



5. Press **ENTER** to Increase digit



6. Press **FUNC** to scroll to Reboot






7. Press **ENTER** to reboot device to update settings

Modules must be on the same frequency to communicate with each other

CHANGE SERIAL PORT SETTINGS

In some cases the port that the LoRa communicates with the inverter and battery on may need configuration. Using buttons on the front of **both** LoRa's at one time.

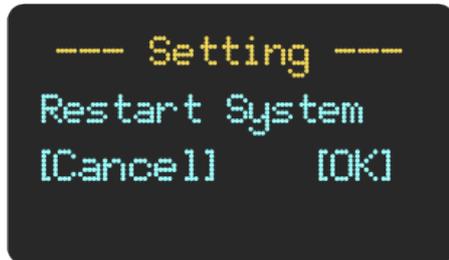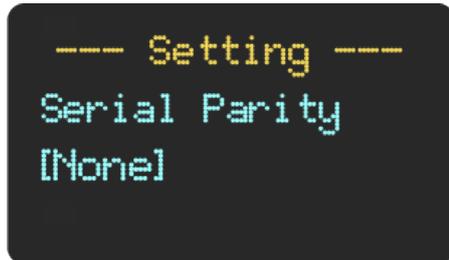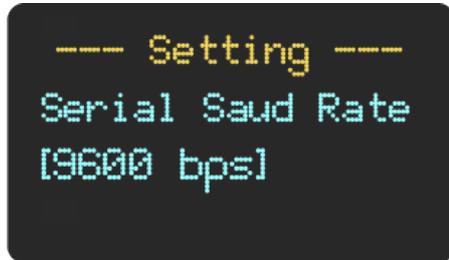

1. Press and hold **FUNC** to display the Main Menu



2. Press **FUNC** repeatedly to scroll to UART



3. Press **ENTER** to select UART Setting menu



4. Press **ENTER** repeatedly to scroll to desired Baud Rate



5. Press **FUNC** to Parity.sub menu



6. Press **ENTER** repeatedly to scroll to desired Parity



7. Press **FUNC** to reboot device to update settings



8. Press **FUNC** to scroll to Reboot



9. Press **ENTER** to reboot device to update settings